

To program memory channels in the Kenwood TM-V71A:

To set freq press vfo then select freq, then select + - or nothing press tone to t or ct or dcs select tone press f then tone select tone with tuning knob then press any other button. To set this in memory press f then select channel with tuning knob then press mr to store.

To set up for cross band repeater

1st select left channel then right channel then push f then push tuning knob then rotate knob to 403 select cross then turn unit off. Press tone and on button to start cross band repeat.

To set up for normal operation turn unit off and press tone and power on.

To clear a channel turn unit off press mr and turn power on select channel and press tuning button.

VHF channels

UHF channels

1 145.37

110 443.375

10 144.5

111 440.1

11 144.52

112 440.125

12 144.54

113 440.15

13 144.56

114 440.175

14 144.6

115 440.2

50 weather

116 440.225

60 fire

117 440.250

118 440.275

119 440.3

120 440.5